



Refilling Quicklube Reservoirs

Two Options for Refilling Lincoln 203 Grease Reservoir on 4, 8, or 16 lb Pumps




Typical refill time using an air operated pump to refill reservoir is 5-10 minutes





Procedure when using L273921 Quick Fill Adapter

1. Locate lever actuated grease gun
2. Unscrew grease gun head casting and set the head casting aside
3. Pull back the follower handle until fully extended and lock in place
4. Load 14.5 oz. grease cartridge into standard grease gun barrel (see below)
5. Unscrew cover cap on quick fill adapter
6. Screw male end of grease gun barrel into female quick adapter
7. Release follower handle, engage follower to begin grease transfer
8. Slowly push on grease follower rod to transfer grease into reservoir
9. The 8 pound reservoir will hold approximately 7 standard grease cartridges
10. Time required to load one 14.5 oz. cartridge of grease, 2-3 minutes
 - a. to load a grease gun
 - b. screw into quick fill adapter
 - c. empty one grease cartridge
11. After refilling, replace cover cap by screwing cap clockwise in refill adapter
12. Important: Replace cap as this will prevent contamination from entering pump reservoir

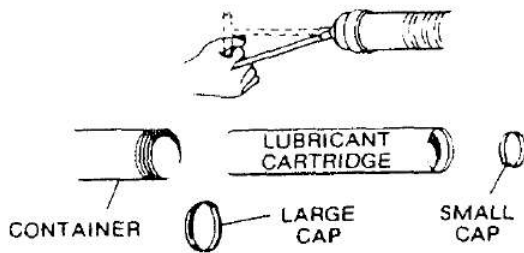

Lever Actuated Grease Gun



Quick Fill Cover Adapter and Cover Cap

Standard grease gun

Grease follower handle