



# Replacement Parts

## SERIES 150

## Lubrication Systems

Below is a list of replacement parts for the Series 150. To use this table you will need to refer to the drawing of the system in the back of this manual. The descriptions in the bill of materials on the drawing are the same as this list. When ordering any electrical components, please refer to the electrical drawing for voltage information. If your system is 220VAC the components are 120VAC due to the step down transformer installed in the system. Please use item number when ordering.

ORSCO recommends having (1) Injector, (1) Air Valve and (1) Operator on hand to repair system. The rest of the components are available if a component is lost or broken.

Item Number	Description
495 09343	0.015ml Injector
495 09345	0.030ml Injector
495 09350	0.060ml Injector
495 09323	R10-2 Air Regulator
495 09185	0-30 PSI Gauge
561 07100	Pressure Switch
105 07178	ORSCO 67 Operator – 120VAC
105 07179	ORSCO 67 Operator – 24VDC
105 07168	250-02-007-67 Air Valve – 120VAC
105 07169	250-02-007-67 Air Valve – 24VDC
108 07108	Fuse Holder
108 07117	GMA-1 1 Amp Fuse
108 07110	GMA-4 4 Amp Fuse
108 07111	GMA-250 1/4 Amp Fuse
510 96369	System Cycle Time Relay (Door Mounted)
090 07162	Start/Stop Relay
090 07072	Injector Timing Relay TDR-4A11 – 120VAC
090 07074	Injector Timing Relay TDR-3A11 – 24VDC

Revised 02-04-10